

Step1 **Must Check your Server** 1: CPU must support 64bit and the Virtualization 是说服务端的视频格式必须支持 Userful 吗? 2: The Server Video must be Support on userful 3: More than 30G Disk is recommended. 4: Internet network is available for software update 5: Software cannot be installed by usb-dvdrom, shall be installed by SATA/IDE dvd rom 6: a switcher or router is required; 7: AMD CPU is not recommended. Step2 Step by step, Reboot Welcome to Userful Install Userful EL 6 Boot from local drive Set Administrator and Password: set root/111111 Welcome **Administrator Password** License Information **Keyboard Layout** Set the root password by filling the following fields. Administrator Password New Root Password: Hostname Confirm Root Password: ••••• Create User Date and Time set centerm/111111 Set user and Password, Welcome **Create User** License Information You must create a 'username' for regular (non-administrative) use of your **Keyboard Layout** system. To create a system 'username', please provide the information Administrator requested below. Password <u>U</u>sername: centerm Hostname Create User Full Name: centerm **Date and Time** Password:


Confirm Password: •••••






The Server Search the Zero Client, and set zero client ip mode (dhcp or static)


Then, Assgin All

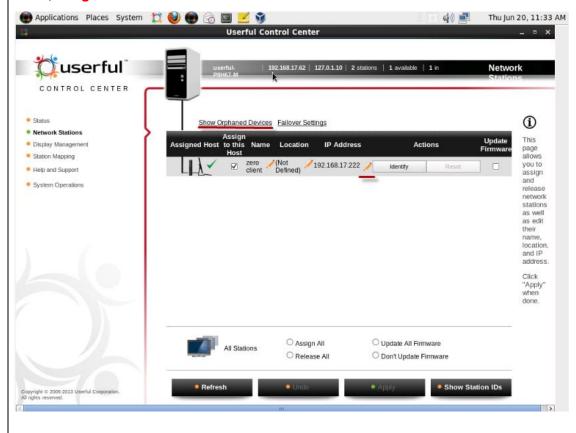


Step6 | Run virtual box, install xp , win7 or other OS

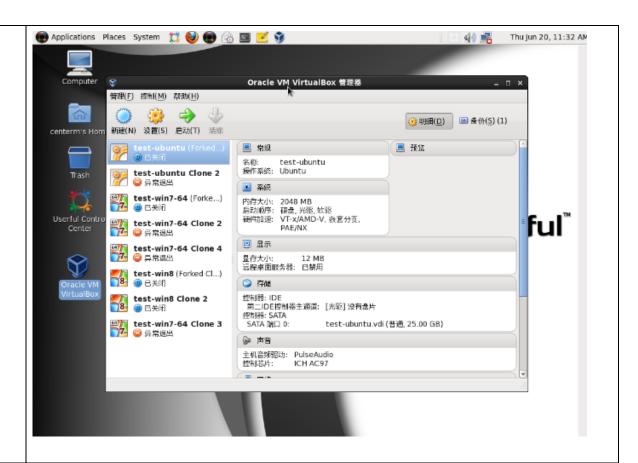

The userful multiplatform linux have some functions, the important functions is sharing linux and Step7 userful-virtual box vdi (need have virtual box vm os)

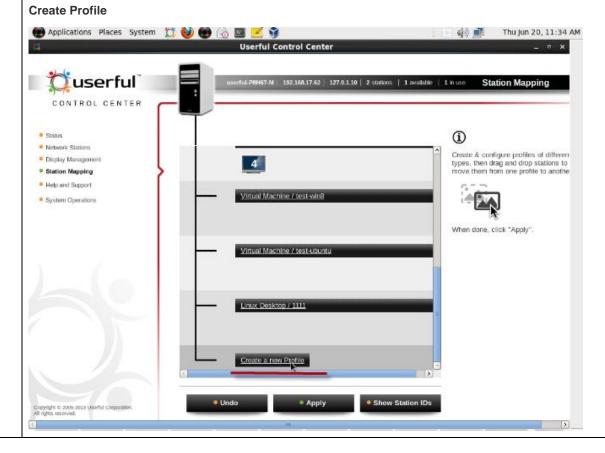

. 0	CENTER				
	Create Profile				
	*Type:	Virtual Machine 0			
nt	*Name:				
	*Master VM:	Select C			
	Locked:	☐ If locked, the VM will be reverted to its initially-cloned state whenever it is restarted.			
		>			
- 1		Ri .			
1					
		Cancel OK			
Se	Set Station Mapping to Profile (drag 2/3/4 station id to prolife, canot drag ID1) ,Apply				

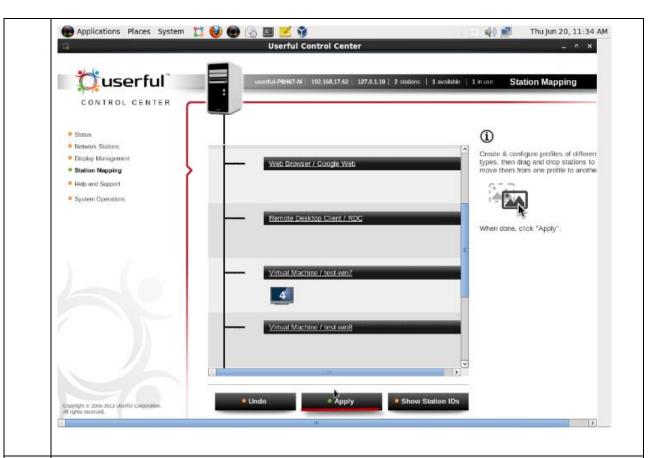

Step8 The Zero client then first show userful logo, , and next show OS

